

MTX-30P and MTX-30F PUSH WIFI SETUP GUIDE

5. With your USB still inserted into the time clock unit, choose **Upload WiFi Password**.
6. Select the **Load Password** option using the down arrow and then Press **OK (M/↵)**. *The password will populate from the thumb drive and be obscured by *****.*
 - Use the down arrow key to highlight the “ok(M/↵)” Icon and press (M/↵) to enter
 - “Rebooting wireless device” will appear, this is normal
 - Wait for the unit to revert back to home screen, when successful, the MTX-30 unit will connect to your Wi-Fi network and show the WiFi icon in top right corner of screen.
 - Press the (M/↵)

Once you see the WiFi icon in the top right corner of the screen confirm it is connected to the correct network by pressing **OK (M/↵)**, selecting **Comm.** and pressing **OK (M/↵)** and then selecting **Wireless Network** and pressing **OK (M/↵)**.

If connected correctly, the SSID will display your WiFi name. *(Make note of the IP address displayed for future reference, if necessary.)*

Verifying & Performing Ping Test

Ping the IP address displayed using the Windows command prompt.

This is done by clicking the windows start button and typing CMD.

At the command prompt type “ping *IP address*” and press enter.

- If successful, you will get 4 replies. *If ping times out please call support at 1-800-896-7035.*
- If successful, add a location (and terminal 1) to Time Guardian and set time in **Comm.**

For support, please call **1-800-896-7035** (option 3) or email us at tgsupport@amano.com




In order to use your MTX-30P or MTX-30F Push unit you will need to connect it to WiFi.

If your WiFi password is alphanumeric, you must first create a WiFi password file using a USB thumb drive (*not included*).


To Create A WiFi Password File

1. Plug your USB thumb drive into a Windows based PC.
2. Open the Windows Notepad application.
 - ✓ This can be done by clicking the Windows start button and typing “Notepad” and click on the notepad app icon to open.
3. Once the Notepad application opens type the following line inside Notepad: `WirelessKey=`*enter your specific WiFi password here*

EXAMPLE:

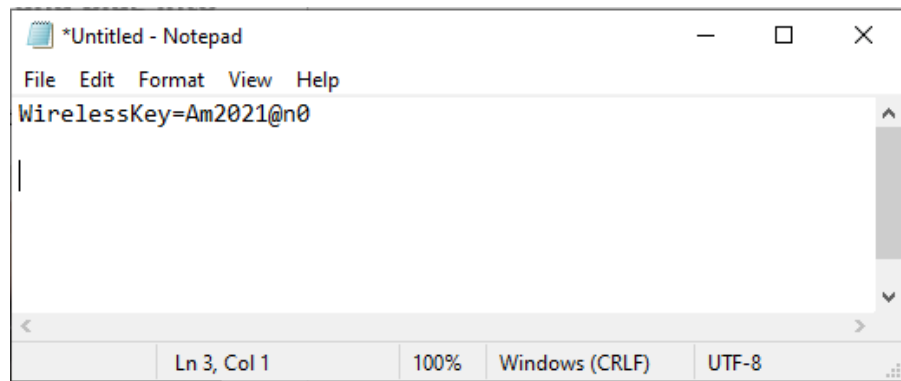

Next, click “File” and then “Save As”.

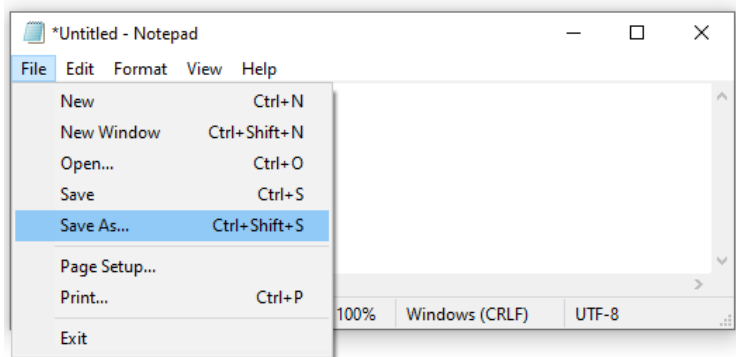

When saving your file, make sure the location you are saving to is the USB drive.

Type the filename “updataoptions2.cfg” then click Save.

After confirming that the file has saved to your USB, remove the USB from your PC and plug it into the MTX-30P or MTX-30F Push clock which is located on the left side of the unit.



1. Press the Menu button (*M/↵*) to display the Main Menu.
2. Using the arrows highlight the **COMM.** icon and then press **OK**.
3. Highlight **Wireless Network** and then press **OK** (*M/↵*)
4. Use the arrows to select your WiFi SSID name, then Press the **OK** (*M/↵*) button.

